

Problem description:


After a long break or after cleaning the device, the water level in the water tray is no longer detected. The message "No water" appears and the humidifier mode is deactivated.

Possible cause:

The float is not correctly hooked in and therefore does not move freely - therefore it does not float on the surface and the water level is not correctly detected.

Solution:

Remove the float again and hook it in correctly.

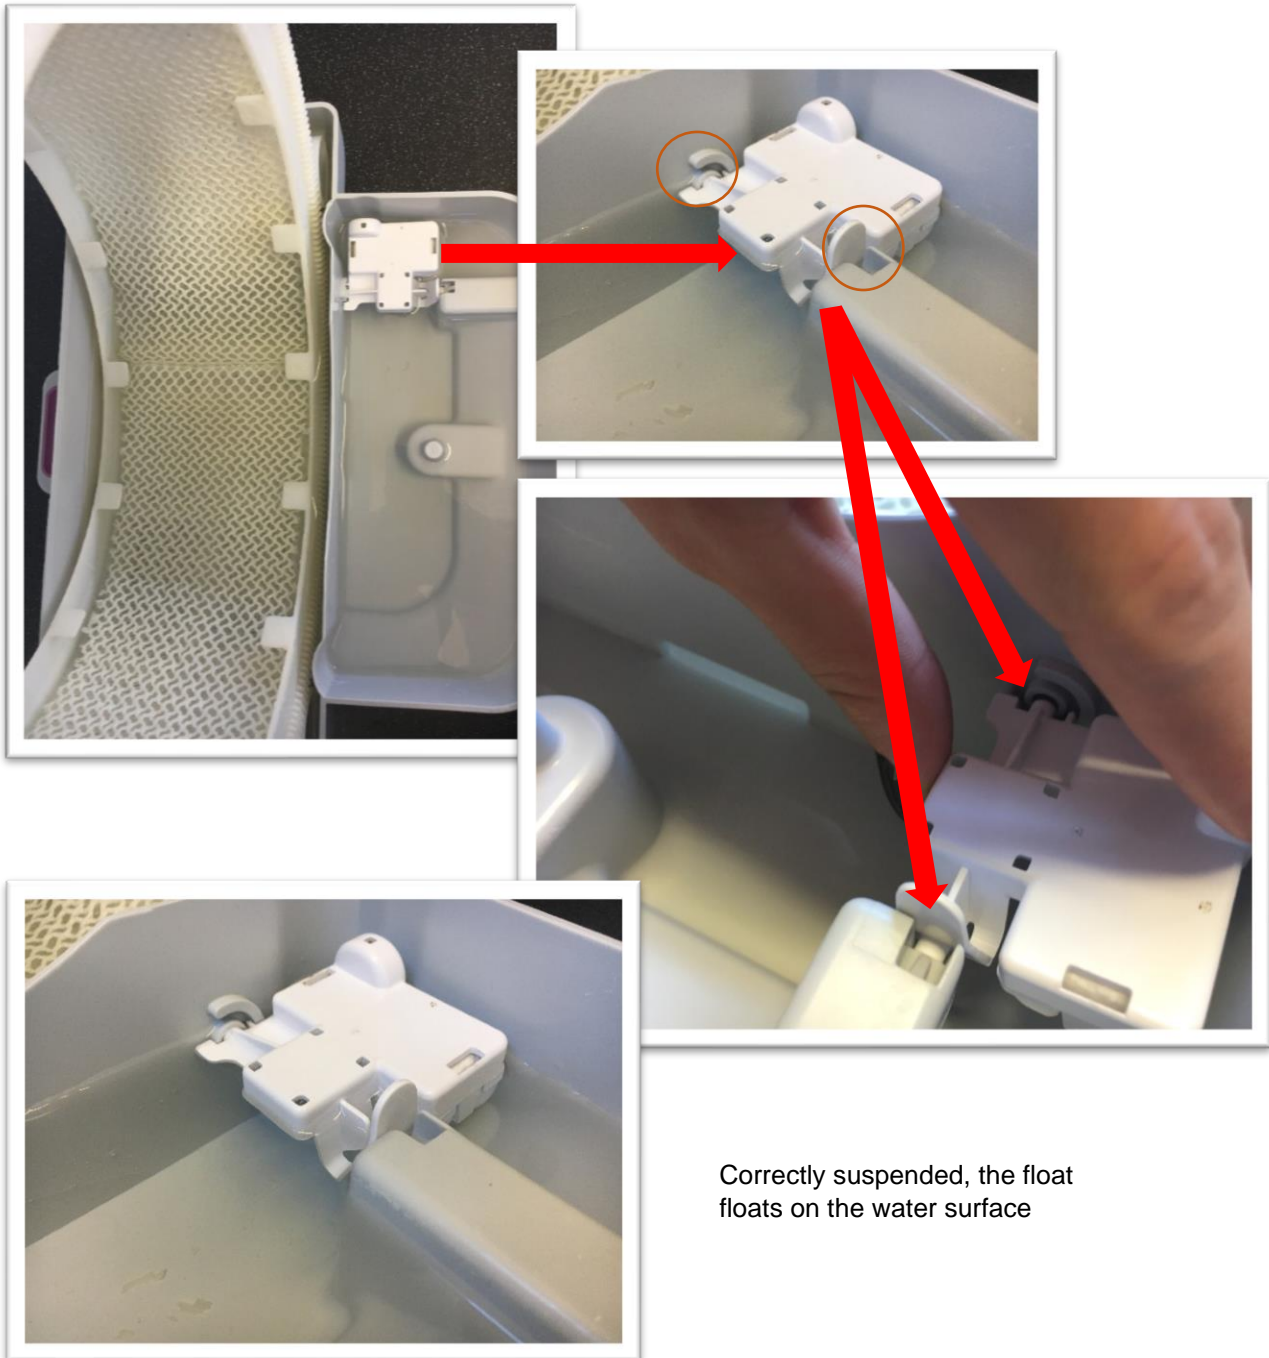

Correctly suspended, the float floats on the water surface